



## Canceling the Alarm on the EVTA Scooter

When the alarm ceases to work the scooter will also stop working. The following instructions, using a sequence of pictures, shows how to cancel the alarm on the EVTAmerica R-20 which is basically the same way the alarm is cancelled on the Z-20 scooters.

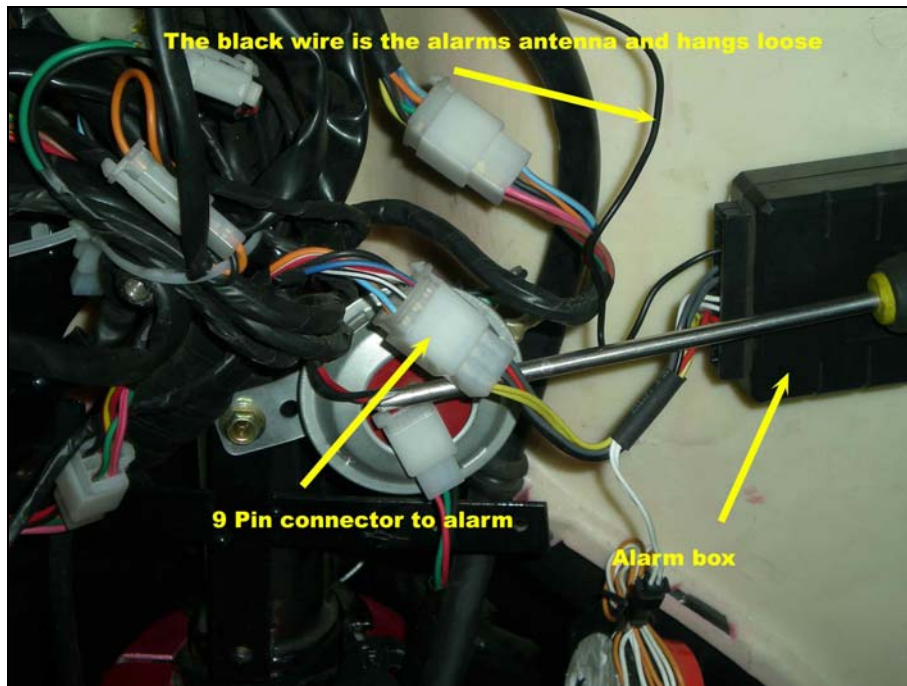

First take out the plastic front of the scooter and find the 9 pin connector that goes from the harness to the alarm.


Keep the circuit breaker and the key in the OFF position.

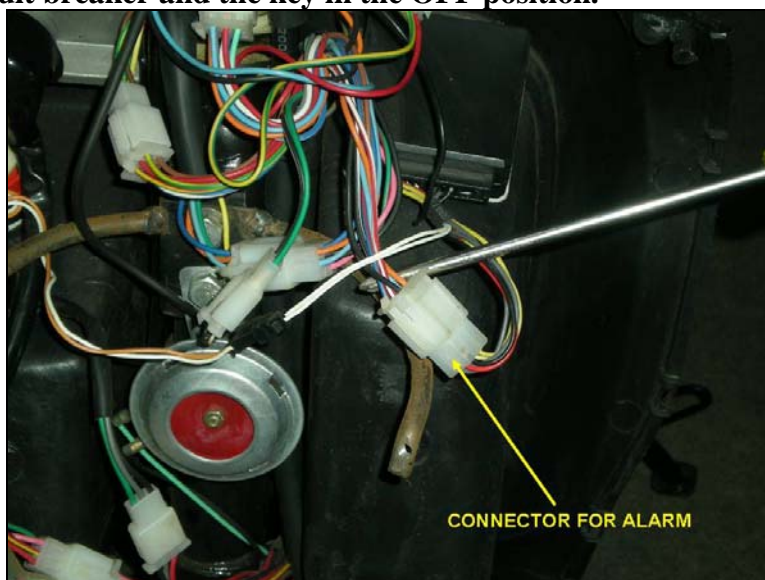


**Disconnect the alarm 9 pin connector (use the wiring color guide in the harness wiring information Excel folder)**



**Once you separate the connector disregard the side that goes to the alarm and concentrate on the 9 pin side that goes to the harness. (Female side)**

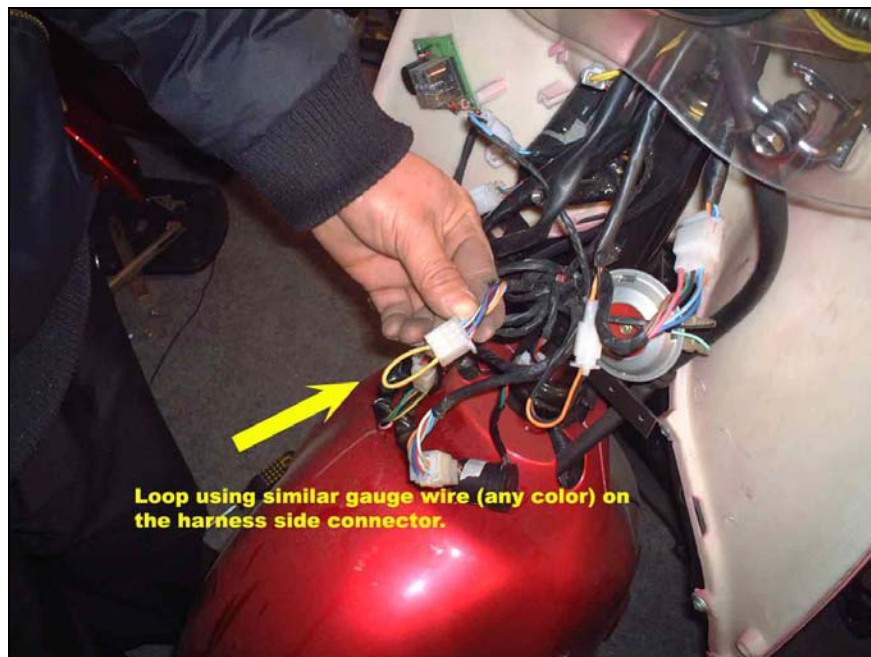

**Using a small gauge wire you make a loop which you have to insert snugly into the connector**

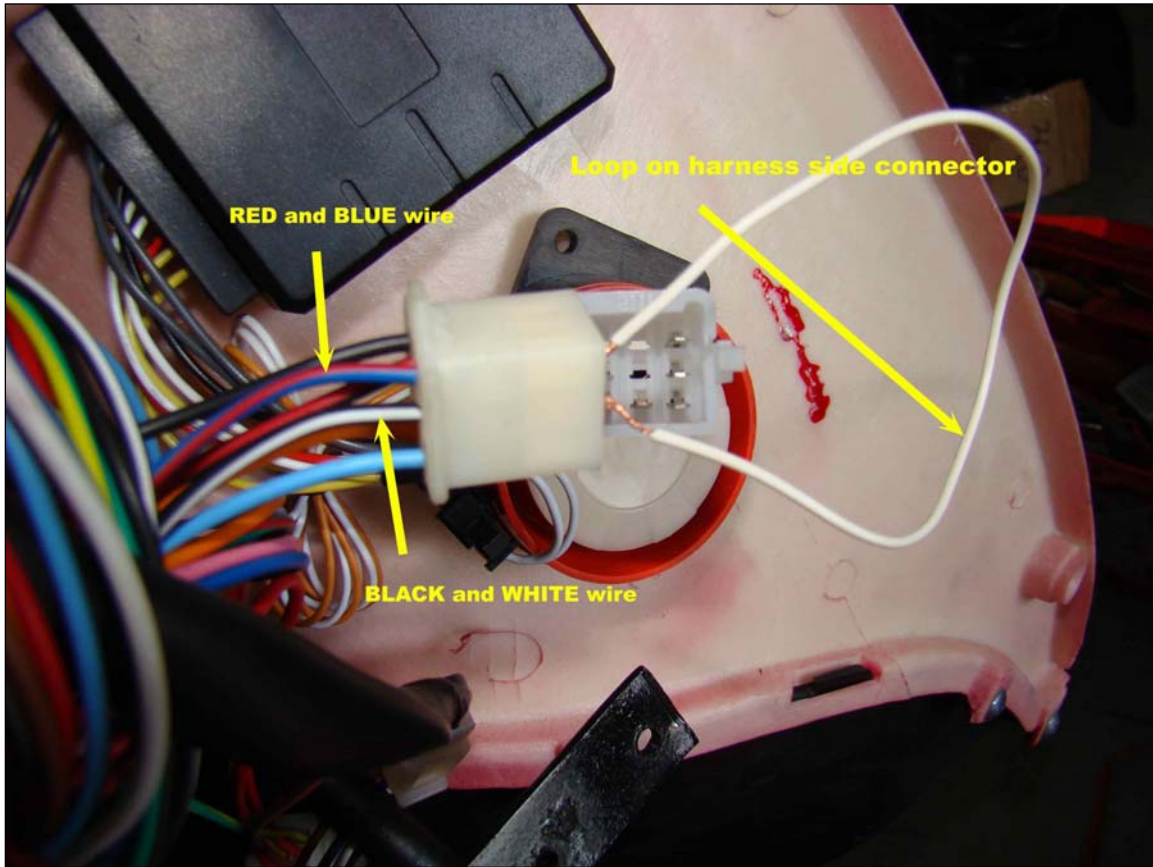

**Finally the loop has to be made between the Blue and Red wire and the White and Black wire. The alarm will now be inoperative and the bike will function without it. Should you either want to eliminate the alarm out of choice or because of a defective or broken alarm, this is the way to do so.**